



CORDING CENTER STACK TRACK

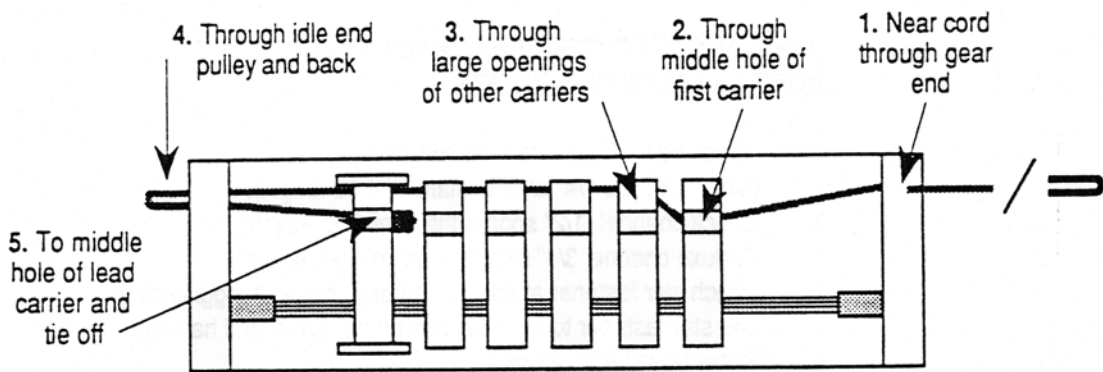

1. Close carriers
2. Manually slide carriers toward control end
3. Place beads on near cord on both sides of first carrier

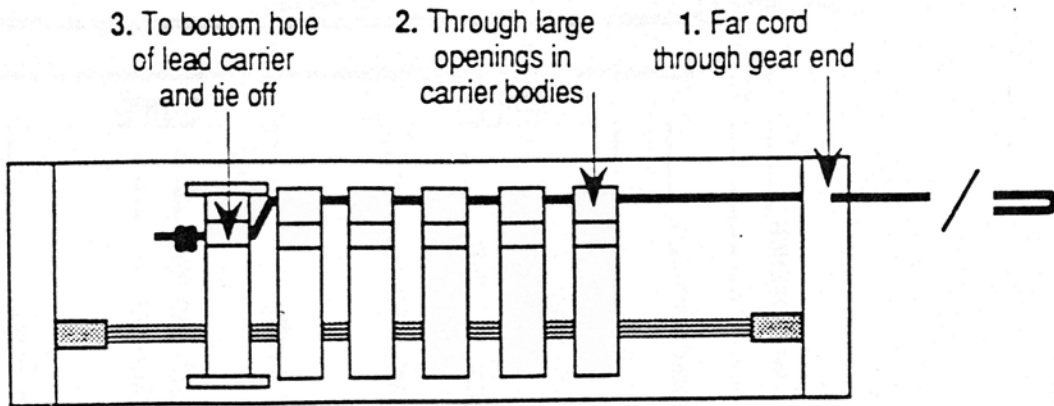